


SETUP


Note: Should your roof already be fitted to the frame, go to step 3

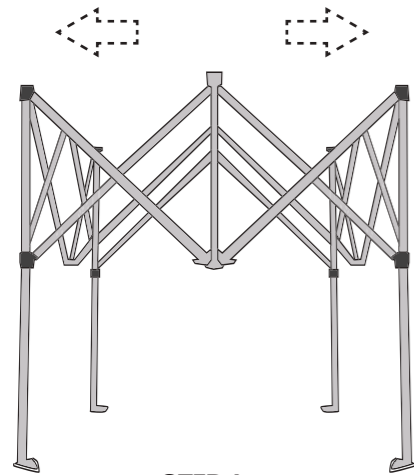

STEP 1:
Open frame 75% of full extension




STEP 2:
Fit roof. Fit corners of roof to corners of frame. Fit centre of roof pocket over centre post.

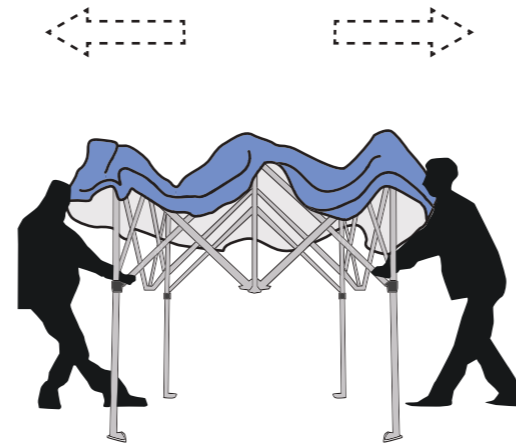

STEP 3:
Fully open frame. Grasp lower truss bar as indicated and walk backwards.



STEP 4:
Ensure roof locking pins have engaged.

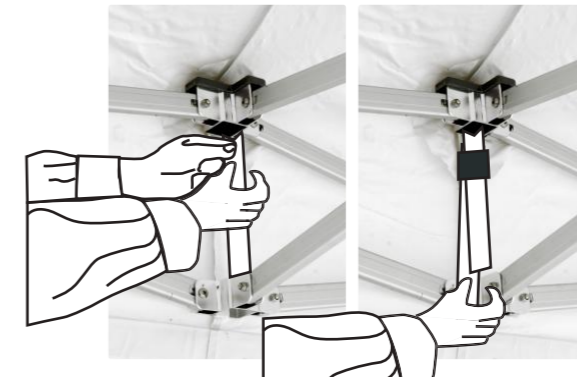


STEP 5:
Tighten the roof by attaching the roof with velcro straps to the truss bars.



STEP 6:
Extend legs to desired height. Ensure locking pins have engaged.

PULL DOWN

Note: Your Poptent is designed to be stored away with roof on frame, but when roof is wet, open up frame with roof 75% until dry before storing.

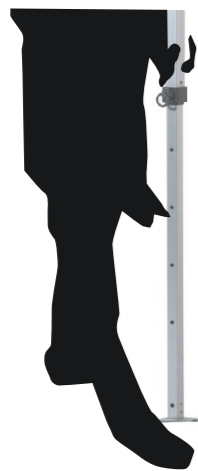


STEP 1:
Pull rings on the lower legs locking pins and retract legs.



STEP 2:
Undo the velcro straps.



STEP 3:
Pull rings on the upper roof locking pins.

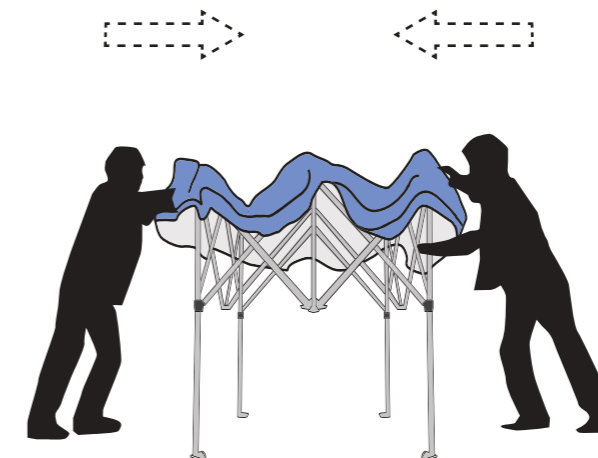

STEP 4:
Grasp the top truss bar and walk forward.